

POWERFLEX®

PART NUMBER

PFF26-102G

DESCRIPTION

Front Wishbone Rear Bush Adjustable

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane Bushes 1 x Spanner
2 x Stainless Steel Sleeves 1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the original rubber bush and outer shell from the front arm.
2. Clean any dirt and corrosion from the bore of the arm. Remove any sharp edges with a rounded file.
3. At this point, decide if you would like increased anti-lift by adding the supplied spacer washer to the outer shell or omitting it for standard arm geometry. Once decided, push the pre-built bush assembly into the arm from the top, so the lip of the shell with/without washer sits flush to the top of the arm as shown in Fig 1.

WARNING: Do not press on the centre ball or adjustable sleeve, press on the metal outer shell only to prevent damaging the bush.


4. For maximum caster adjustment, rotate the centre sleeve with the supplied spanner so that the hole offset is nearer to the inside of the car, as shown in Fig 2. This setting can be adjusted to suit your preference.

5. Refit the arm to the vehicle and tension all hardware to the manufacturer's recommended torque settings.

6. Check and adjust wheel alignment accordingly.



Figure 1

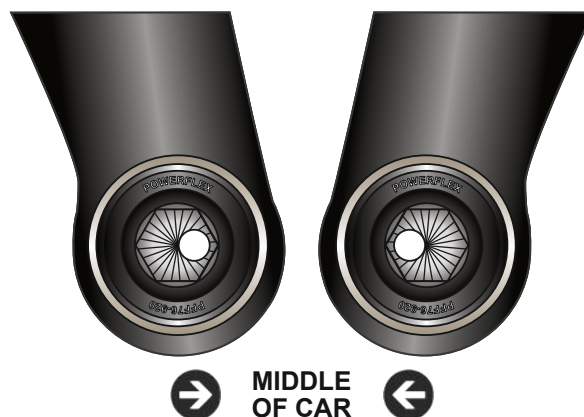

➔ MIDDLE OF CAR ➔

Figure 2