

# POWERFLEX®

## PART NUMBER

# PFF75K-304

## DESCRIPTION

## FRONT UPPER CONTROL ARM

## INSTALLATION GUIDE

### Contents (parts per pack):

- |                                  |                             |
|----------------------------------|-----------------------------|
| 1 x Left Arm Fitted With Bushes  | 1 x PTFE/Silicone Grease    |
| 1 x Right Arm Fitted With Bushes | 4 x Stainless Steel Sleeves |
| 4 x Mild Steel Washers           | 4 x Nylon Washers           |

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



### Fitting Instructions:

1. Remove the original wishbone.
2. Apply the supplied grease to the knurled bore and end faces of the polyurethane bushes, and insert the stainless steel sleeves until flush with the bush end faces.
3. Place the smaller mild steel washer on the bush face towards the inside of the arm.
4. Place the larger nylon washer on the face of the bushes looking outside of the arm.
5. Refit the arm to the vehicle and tension all hardware to the manufacturer recommended torque settings.



Figure 1

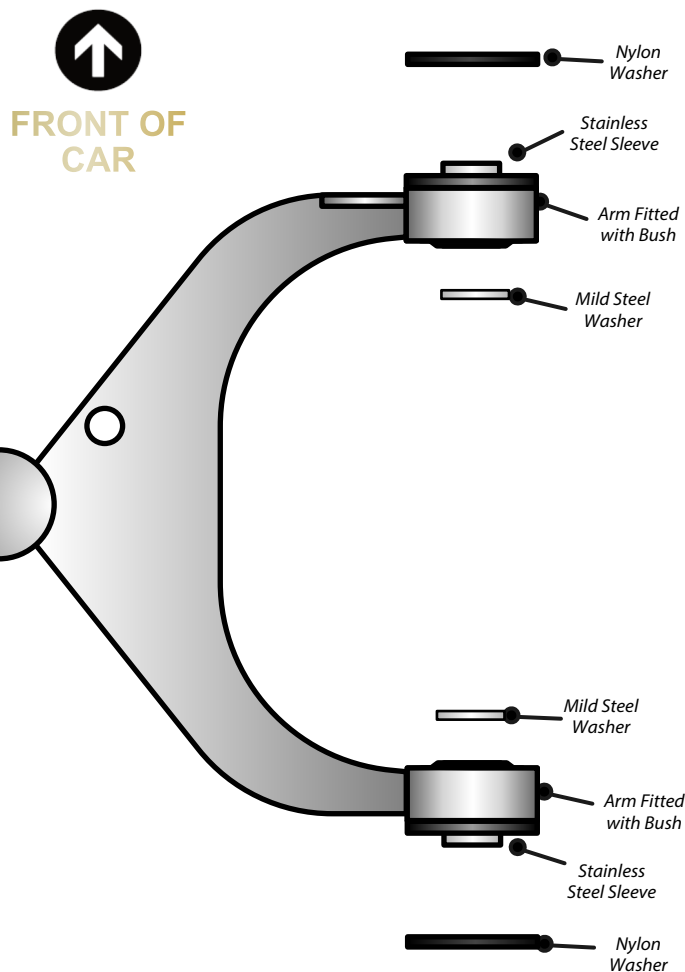


Figure 2