

POWERFLEX®

PART NUMBER

85-1301G

DESCRIPTION

VW T5 FRONT ARM FRONT BUSH, CAMBER ADJUSTABLE

INSTALLATION GUIDE

Product Description

Allows on-car adjustment of camber. Gives +/- 0.75 degrees

Contents (parts per pack):

2 x Polyurethane Bushes 1 x PTFE/Silicone Grease
2 x Stainless Steel Sleeves 2 x Nylon Washers
1 x C- Spanner

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Press the original bush out of the arm, removing any dirt and rust from the bore.
2. Push the bush in from the inside of the arm until its shoulder fits flush to the arm. Apply the supplied grease to the bore of the bush.
3. Slide the washer onto the adjustable sleeve, applying some grease to both faces of the washer and end face of the bush.
4. Push the sleeve into the bush from the outside of the arm until flush with the washer and bush face.
5. Refit arm to car and tension all hardware to manufacturers recommended torque settings.
6. Drive the car to settle the suspension and re-adjust the geometry if required.

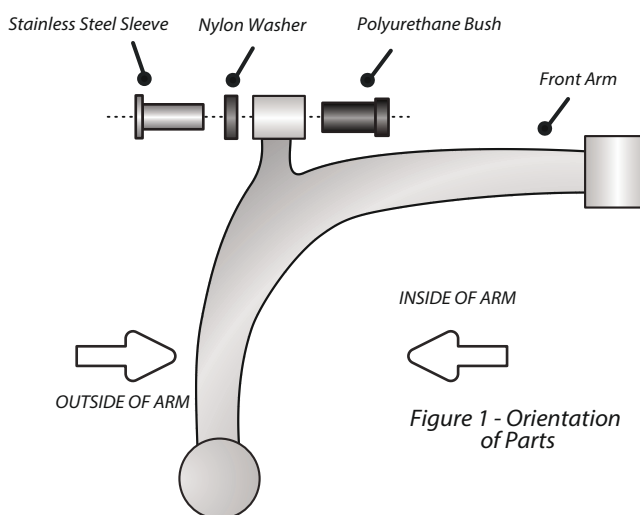


Figure 1 - Orientation of Parts



Figure 2 - Adjusting the Geometry