

# POWERFLEX®

## PART NUMBER

# PFF19-701

## DESCRIPTION

## FRONT WISHBONE FRONT BUSH

## INSTALLATION GUIDE

### Contents (parts per pack):

2 x PFF19-701A Bushes      1 x PTFE/Silicone Grease  
2 x PFF19-701B Bushes      2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



### Fitting Instructions:

1. Remove the original bush and clean away any dirt and corrosion.

2. File away any sharp edges from the vacant hole

3. Insert PFF19-701A and PFF19-701B into the each end of the vacant hole, taking note of the positioning shown in figure 1.

- PFF19-701A (larger top hat) is inserted in the side facing the front of the car.
- PFF19-701B (smaller top hat) is inserted in the side facing the rear of the car.

4. Apply some of the supplied grease to the bore of the Polyurethane bushes and insert the Sleeve into the bore, until it sits flush within the bore.

5. Refit the arm to the subframe, remembering to tension all hardware to manufacturers recommended torque settings.

6. Test drive and enjoy!

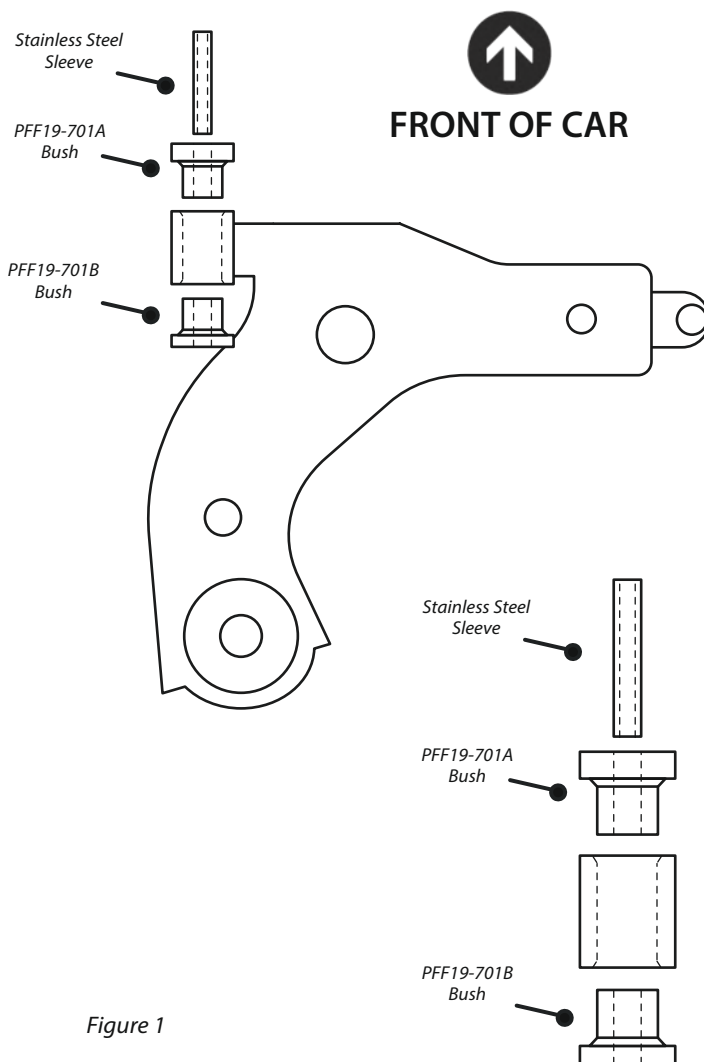


Figure 1