

POWERFLEX®

PART NUMBER

PFF2-101

DESCRIPTION

FRONT LOWER WISHBONE FRONT BUSH

INSTALLATION GUIDE

Contents (parts per pack):

4 x Polyurethane Bushes 1 x PTFE/Silicone Grease

4 x Anodised Aluminium Sleeve-Halves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove front lower wishbone from vehicle.
2. Carefully remove the OEM bush from the front position of the wishbone.
3. Clean bore of wishbone and remove any burrs or sharp edges.
4. Push the Polyurethane bushes into place in the wishbone bores. (Figure 1)
5. Apply the supplied grease liberally into the knurled bore and outside faces of the bushes and the outside of the sleeve-halves.
6. Push a sleeve-half into each end of the bush, until sitting flush.
7. Refit the arm to the car, ensuring to tighten all hardware to manufacturers recommended torque settings.

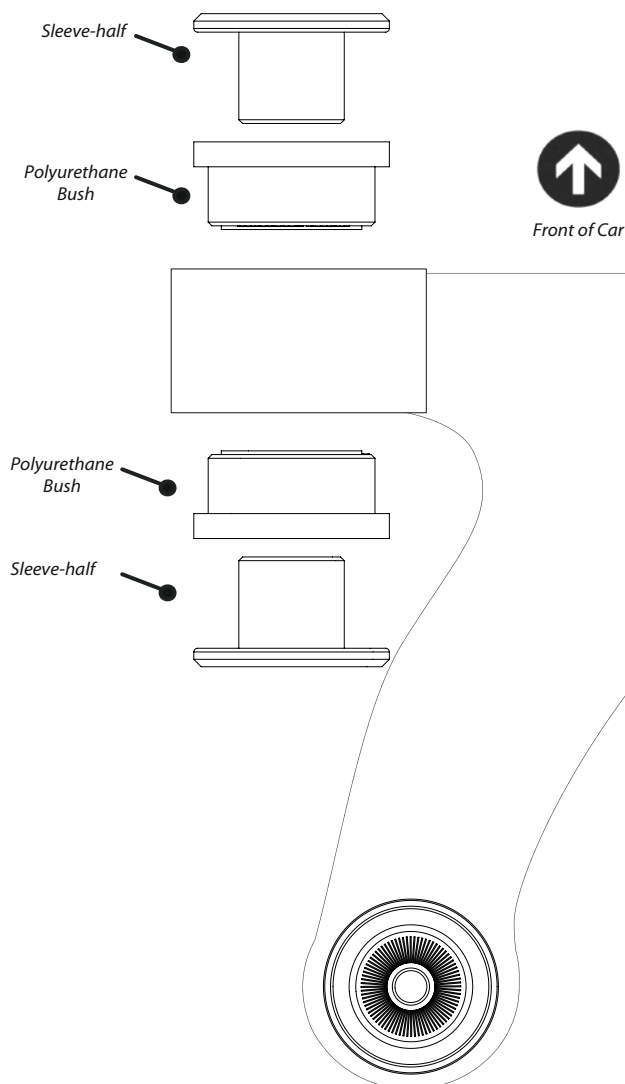


Figure 1