



PART NUMBER

**PFF3-1203**

DESCRIPTION

**FRONT UPPER CONTROL ARM**

INSTALLATION GUIDE

**Contents (parts per pack):**

4 x PFF3-1203 Polyurethane Bushes 1 x PTFE/Silicone Grease

4 x Stainless Steel Sleeves

*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*



**Fitting Instructions:**


1. Remove the original bush from the arm and clean away any dirt and corrosion from the vacant hole, filing away any sharp edges with rounded file.

2. Using a vice or press, insert the PFF3-1203 bush into the vacant hole. Press the bush into the void until the bush sits flush within the arm.


**Tip - Apply washing up liquid to the vacant hole of the arm before inserting the bush, alongside pressing the bush into the hole at an angle to ease insertion. Further details on fitting cotton reel bushes can be found on our website.**

3. Apply some of the supplied grease to the exterior surface of the Stainless Steel Sleeve and push it into the bore of the PFF3-1203 Bush, until it sits flush within the bore and recess.

4. Refit the arm and test drive the car, remembering to also tension all hardware to manufacturers recommended torque settings.

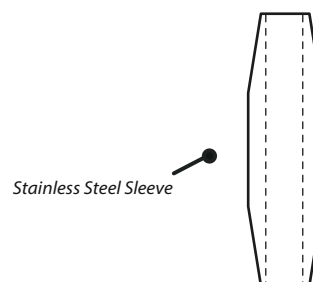

Stainless Steel Sleeve

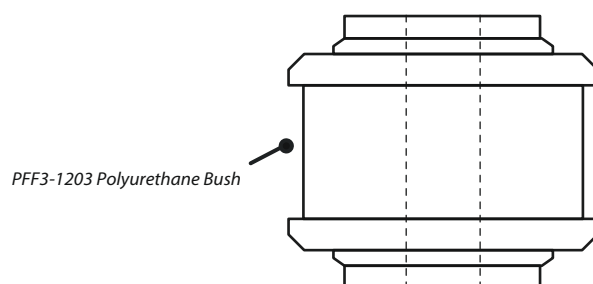

PFF3-1203 Polyurethane Bush



Arm