

POWERFLEX®

PART NUMBER

PFR46-221

DESCRIPTION

Front Inner Track Control Arm Bush

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane A Bush 2 x Polyurethane B Bush
2 x Stainless Steel Sleeves 1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

Fitting Instructions:

1. Remove the original rubber bush from its outer shell. Do not press out the outer shell as our bush requires this for fitment.
2. This can be done by burning away the rubber with a blow torch, leaving the bush to burn slowly or cutting away the rubber.
3. Clean any dirt, rubber residue and corrosion from the bore of the shell and file off any sharp edges.
4. Fit Bush A into the larger, stepped side of the arm. Fit Bush B into the opposing side.
5. Apply some of the supplied grease to the outer faces of the bushes and the bore.
6. Insert the stainless-steel sleeve into the bushes until flush.
7. Refit to the vehicle and tension all hardware to the manufacturers recommended torque settings.

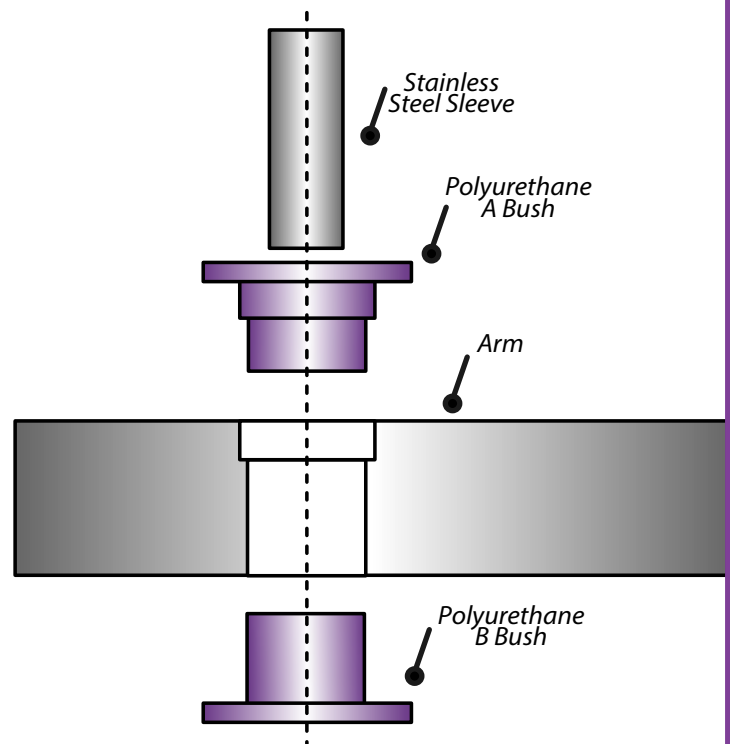


Figure 1