

POWERFLEX®

PART NUMBER

PFF5-220

DESCRIPTION

LOWER TORQUE MOUNT

INSTALLATION GUIDE

Contents (parts per pack):

- 1 x Polyurethane A Bushes
- 1 x PTFE/Silicone Grease
- 1 x Polyurethane B Bushes
- 2 x Stainless Steel Sleeves
- 4 x Zinc Plated Mild Steel Washers
- 1 x PU Sleeve

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove OEM mount from the vehicle.
2. Insert the PU inner sleeve into the larger PU bush.
3. Apply some of the supplied grease to the bore of each bush.
4. Insert both stainless steel sleeves into their respective bushes.
5. Apply the remaining grease liberally to both end faces of the bushes to lubricate between the bush and the zinc-plated washers.
6. Re-fit the bracket to the vehicle, placing the washers on either side of the bushes within the mounting point.
7. Replace all bolts and tighten to manufacturers recommended torque settings.

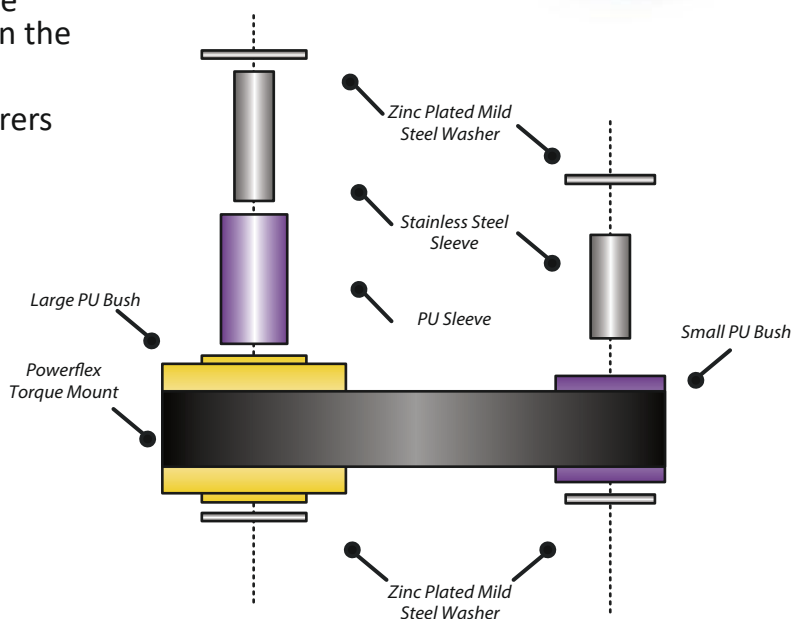


Figure 1