

POWERFLEX®

PART NUMBER

PFF3-120-10/12

DESCRIPTION

SUBFRAME BUSHES

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane A Bushes
- 1 x PTFE/Silicone Grease
- 2 x Polyurethane B Bushes
- 2 x Stainless Steel Sleeves
- 2 x Mild Steel Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Support the subframe and loosen the bolts to lower safely. This should allow you enough room above the subframe to gain access to the top of the bush.
2. Remove the original rubber bush including any outer shell from the subframe. This can be done by using a puller or cutting the bush out.
3. Clean any dirt and corrosion from the bore of the subframe and file off any sharp edges with a rounded file.
4. Fit the tapered flanged B bush to the upper half of the subframe as shown in fig 1.
5. Fit the square flanged A bush into the lower half of the subframe.
6. Apply some of the supplied grease to the bore of the bush and insert the stainless steel sleeve until flush.
7. Fit the supplied washer to the bottom of the bush with the OE bolt, and refit the subframe to the vehicle.
8. Tension all hardware to the manufacturers recommended torque settings.

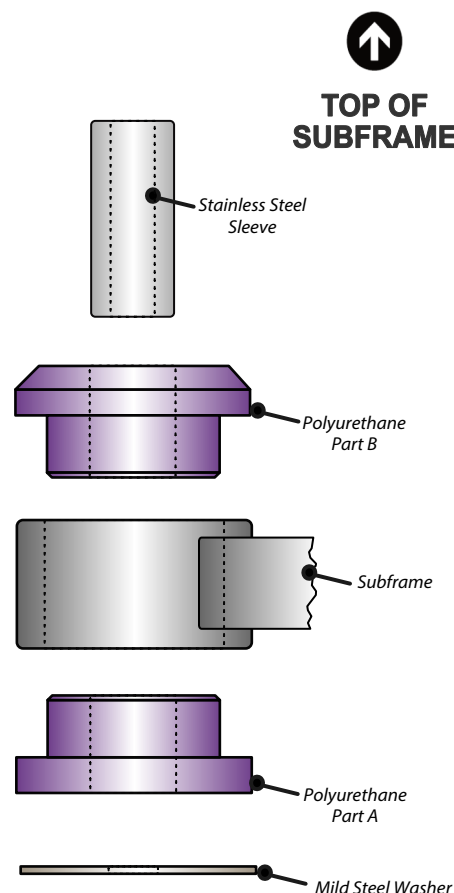


Figure 1